



Download from
Dreamstime.com

This watermarked comp image is for previewing purposes only.



ID 35103813

© Yulia Gapeenko | Dreamstime.com

[Canon Ir 1023 Scanner Driver For Mac](#)

Setting Up Sending to Email in the Canon iR1023/iR1025 Series

Where you see a folder or computer name in brackets, <Host Name>, you will need to put your own names and folder names there.

What you will need to send email from the Canon imageRUNNER 1023/1035 Series:

Settings for an email account that will be programmed into the copier for sending of email:

- Email address
- SMTP Server (if you are using a Microsoft Exchange Server, the IP address of the Exchange Server)
- POP Server
- User Name
- Password
- If your email account requires SMTP authentication, the settings for this.

Note: if your email account requires SSL authentication, you will not be able to use the send-to-email feature on this machine, the reason being that the iR1023/iR1025 does not support SSL authentication. Gmail and Yahoo! Mail are two email providers who require SSL. There are two workarounds:

- (1) Send to a shared folder, then attach it to an email message and send it.
- (2) An alternative is to set up a free SMTP relay account at www.jangosmtp.com. Once your free account is set up, you can simply request a larger amount of free email relays. They just want to make sure you're not spamming. Once set up, you enter the settings that they give you into the copier and you can send email. Please note: this is a third-party solution that we have tried and found that it works for some of our customers. We do not support Jango, as it is a third party software solution. We can help you set it up in your copier. Any other support would come from them.

Set up the email account in the copier. This can be done through the panel of the copier; however, it's easier to do it through the Remote User Interface on your computer. To bring up the Remote User Interface, enter the IP address of the copier into a web browser like Internet Explorer or Mozilla Firefox. Sign in as Administrator (default password is blank).

Under DEVICE, click NETWORK

Under TCP/IP, Click CHANGE on the right side of the screen

Scroll down to Email/Fax Settings

The following settings assume that you will be sending email from the machine but not receiving it.

SMTP Receive – OFF

POP – OFF

Authentication/Encryption Settings:

POP Authentication before Send – OFF

SMTP Authentication – if you don't use it, - OFF

If you DO use it, enter the user name and password where indicated

Enter the SMTP Server, Email Address, POP Server, POP Address, POP Password. Leave POP Interval at "0". (Note: if using Jango SMTP, enter the settings that they have given you when you set up your account).

Enter your destination addresses in the address book, also accessible from the Remote User Interface at your computer. Addresses can also be entered from the copier panel, but there's no keyboard – just the number panel, kind of like texting.

Your copier is ready to send email. You may have to re-boot the copier before sending email.

TIPS AND HELPS: FIND YOUR EMAIL SETTINGS

You will most likely create a new email address for your copier. Other than the email address and password, you can obtain your other settings by looking at your own email account in Microsoft Outlook (if you're using MS Outlook). If you're not, check the web site of your Internet Service Provider, who will publish the settings somewhere on their site. To find the settings in Outlook:

Open Microsoft Outlook

TOOLS

ACCOUNT SETTINGS

Highlight your email account in the list, then select CHANGE. You will see your basic settings for the SMTP and POP Servers.

MORE SETTINGS

OUTGOING SERVER Tab – this will tell you if your email account requires SMTP Authentication, and what those settings are.

ADVANCED Tab – this will tell you your incoming and outgoing port numbers, and if your email account requires SSL encryption. Standard port numbers are 25 for SMTP (Sending), and 110 for POP (Receiving). If your port numbers are different, you will need to change them in your copier. You can see where they are located by looking at the User Data List from your device. See the beginning of this document for instructions as to how to print out a User Data List.



Download from
Dreamstime.com

This watermarked comp image is for previewing purposes only.



ID 35103813

© Yulia Gapeenko | Dreamstime.com

Canon ImageRUNNER 1023iF Car owner - IR 1023/1023N Macintosh Drivers are needed to allow the link between the printer and computer.

1. [canon scanner driver](#)
2. [canon scanner driver lide 120](#)
3. [canon scanner driver for mac](#)

Car tool sales in sale for mac Right here's a /iR 1023/1023N Drivers Computer printer series that correspond to your printing device model.. Here you will discover the driver pertains to the item as well as an description of the compatibility of the products you use with each working system.

canon scanner driver

canon scanner driver, canon scanner driver for mac, canon scanner driver lide 220, canon scanner driver lide 110, canon scanner driver lide 120, canon scanner driver lide 300, canon scanner driver lide 100, canon scanner driver free download, canon scanner driver for windows 7, canon scanner driver for windows 10, canon scanner driver windows 10, canon scanner driver for mac catalina, canon scanner driver big sur, canon scanner driver for chromebook, canon scanner driver linux, canon scanner driver is unavailable [Marvel Legends 2016 Wave 1 Release Date watch online full movie HD quality online](#)

[Gta 5 Fatal Error Fix](#)

Setting Up Sending to Email in the Canon iR1023/iR1025 Series

Where you see a folder or computer name in brackets, <Host Name>, you will need to put your own names and folder names there.

What you will need to send email from the Canon imageRUNNER 1023/1035 Series:

Settings for an email account that will be programmed into the copier for sending of email:

- Email address
- SMTP Server (if you are using a Microsoft Exchange Server, the IP address of the Exchange Server)
- POP Server
- User Name
- Password
- If your email account requires SMTP authentication, the settings for this.

Note: if your email account requires SSL authentication, you will not be able to use the send-to-email feature on this machine, the reason being that the iR1023/iR1025 does not support SSL authentication. Gmail and Yahoo! Mail are two email providers who require SSL. There are two workarounds:

- (1) Send to a shared folder, then attach it to an email message and send it.
- (2) An alternative is to set up a free SMTP relay account at www.jangosmtp.com. Once your free account is set up, you can simply request a larger amount of free email relays. They just want to make sure you're not spamming. Once set up, you enter the settings that they give you into the copier and you can send email. Please note: this is a third-party solution that we have tried and found that it works for some of our customers. We do not support Jango, as it is a third party software solution. We can help you set it up in your copier. Any other support would come from them.

Set up the email account in the copier. This can be done through the panel of the copier; however, it's easier to do it through the Remote User Interface on your computer. To bring up the Remote User Interface, enter the IP address of the copier into a web browser like Internet Explorer or Mozilla Firefox. Sign in as Administrator (default password is blank).

Under DEVICE, click NETWORK

Under TCP/IP, Click CHANGE on the right side of the screen

Scroll down to Email/Fax Settings

The following settings assume that you will be sending email from the machine but not receiving it.

SMTP Receive – OFF

POP – OFF

Authentication/Encryption Settings:

POP Authentication before Send – OFF

SMTP Authentication – if you don't use it, - OFF

If you DO use it, enter the user name and password where indicated

Enter the SMTP Server, Email Address, POP Server, POP Address, POP Password. Leave POP Interval at "0". (Note: if using Jango SMTP, enter the settings that they have given you when you set up your account).

Enter your destination addresses in the address book, also accessible from the Remote User Interface at your computer. Addresses can also be entered from the copier panel, but there's no keyboard – just the number panel, kind of like texting.

Your copier is ready to send email. You may have to re-boot the copier before sending email.

TIPS AND HELPS: FIND YOUR EMAIL SETTINGS

You will most likely create a new email address for your copier. Other than the email address and password, you can obtain your other settings by looking at your own email account in Microsoft Outlook (if you're using MS Outlook). If you're not, check the web site of your Internet Service Provider, who will publish the settings somewhere on their site. To find the settings in Outlook:

Open Microsoft Outlook

TOOLS

ACCOUNT SETTINGS

Highlight your email account in the list, then select CHANGE. You will see your basic settings for the SMTP and POP Servers.

MORE SETTINGS

OUTGOING SERVER Tab – this will tell you if your email account requires SMTP Authentication, and what those settings are.

ADVANCED Tab – this will tell you your incoming and outgoing port numbers, and if your email account requires SSL encryption. Standard port numbers are 25 for SMTP (Sending), and 110 for POP (Receiving). If your port numbers are different, you will need to change them in your copier. You can see where they are located by looking at the User Data List from your device. See the beginning of this document for instructions as to how to print out a User Data List.

canon scanner driver lide 120

[Create Macro In Word 2016](#)

[texas instruments ti 84 download for mac](#)

canon scanner driver for mac

[Gms Profit Calculator \(free Version Download For Mac](#)

b0d43de27c [Unduh Aplikasi Facebook Com Dapodik Genap 2017](#)

b0d43de27c

[Erp Software Libre Para Windows](#)